

## DC100H / DC150H / DC200H / DC300H / DC400H / DC600H / DC900H 使用說明

1. 先將電源線接至單相AC110V或 AC220V插座。(以機器後方貼紙標示為準)
2. 欲加熱時將水槽內水位加滿至 70%~80% 即可。(無加熱時水位覆蓋過工件即可)
3. 將工件置入清洗籃內,再放入水槽內。
4. 按下電源鍵 POWER **(ON / OFF)** SET TIME 燈亮依工件髒污程度按設定鍵 SET (▲ / ▼) 上下自行增減清洗時間可由 1~99 分鐘自行調整, 俱倒數功能 (如需連續洗淨時設定 " 0 " ), 設定完成按下超音波鍵 SONIC **(START / STOP)** 即可開始作動, 洗淨中欲停止按下超音波鍵 SONIC **(START / STOP)** 即可。
5. 使用加熱清洗按下選擇鍵 MODE (●) 至 SET TEMP 燈亮螢幕顯示 " 1 " , 按設定鍵 SET (▲ / ▼) 自行增減所需加熱溫度 (最高設定 80°C ), 如設定大於槽溫時 HEAT ON 燈亮即表加熱中, HEAT ON 燈閃爍即表加熱完成保溫中 (欲修改加熱設定溫度需在洗淨停止時才可修正 ), 洗淨過程中欲查詢槽溫按下選擇鍵 MODE (●) 至 TANK TEMP 燈亮, 即可顯示水槽現有溫度。
6. 停機不用時關閉電源鍵 POWER **(ON / OFF)** 即可 (前次清洗時間會記憶保留, 已設定加熱溫度無記憶保留回復 " 1 " 水槽內水位是否過低或完全無水時避免開機時直接設定加熱溫度一旦啟動會導致加熱器空燒)
7. 當停電或將電源線拔除時, 前次清洗時間設定無法保留, 需重新設定。

### Specification / 規格

Model (機型)	DC100 / DC100H
Tank Size (水槽尺寸)	300 × 160 × 100 mm ( L × W × H )
Overall Size (外型尺寸)	330 × 205 × 280 mm ( L × W × H )
Tank Capacity (水槽容積)	4.8 L
Frequency (振盪頻率)	40 KHz
Tank Material (水槽材質)	SUS 304 # 1.2 mm
Overall Material (外觀材質)	SUS 304 # 0.8 mm
Cover Material (上蓋材質)	SUS 304
Output Power (洗淨出力)	100 W
Timer (定時器)	Continuous ( " 0 " ) & 99 min.
Heater (加熱器)	150W ( DC100H only then has this equipment )
Temp.Setting (溫度設定)	Highest 80 °C (DC100H only has this function)
Basket Size (洗籃尺寸)	280 × 135 × 60 mm ( L × W × H )
Power Supply (使用電源)	AC100 ~ 120V / 60Hz or AC220 ~ 240V / 50Hz
Net Weight (淨重)	5 kg

### Specification / 規格

Model (機型)	DC200 / DC200H
Tank Size (水槽尺寸)	300 × 240 × 150 mm ( L × W × H )
Overall Size (外型尺寸)	330 × 285 × 330 mm ( L × W × H )
Tank Capacity (水槽容積)	10.8 L
Frequency (振盪頻率)	40 KHz
Tank Material (水槽材質)	SUS 304 # 1.5 mm
Overall Material (外觀材質)	SUS 304 # 0.8 mm
Cover Material (上蓋材質)	SUS 304
Output Power (洗淨出力)	200 W
Timer (定時器)	Continuous ( " 0 " ) & 99 min.
Heater (加熱器)	250 W (DC200H only then has this equipment )
Temp.Setting (溫度設定)	Highest 80 °C (DC200H only has this function )
Basket Size (洗籃尺寸)	260 × 220 × 100 mm ( L × W × H )
Power Supply (使用電源)	AC100 ~ 120V / 60Hz or AC220 ~ 240V / 50Hz
Net Weight (淨重)	9.5 Kg

### Specification / 規格

Model (機型)	DC400 / DC400H
Tank Size (水槽尺寸)	500 × 300 × 200 mm ( L × W × H )
Overall Size (外型尺寸)	530 × 345 × 380 mm ( L × W × H )
Tank Capacity (水槽容積)	30 L
Frequency (振盪頻率)	40 KHz
Tank Material (水槽材質)	SUS 304 # 1.5 mm
Overall Material (外觀材質)	SUS 304 # 0.8 mm
Cover Material (上蓋材質)	SUS 304
Output Power (洗淨出力)	400 W
Timer (定時器)	Continuous ( " 0 " ) & 99 min.
Heater (加熱器)	500 W (DC400H only then has this equipment )
Temp.Setting (溫度設定)	Highest 80 °C ( DC400H only has this function )
Basket Size (洗籃尺寸)	445 × 270 × 135 mm ( L × W × H )
Power Supply (使用電源)	AC100 ~ 120V / 60Hz or AC220 ~ 240V / 50Hz
Net Weight (淨重)	18.5 kg

### Specification / 規格

Model (機型)	DC600 / DC600H
Tank Size (水槽尺寸)	500 × 300 × 300 mm ( L × W × H )
Overall Size (外型尺寸)	530 × 345 × 480 mm ( L × W × H )
Tank Capacity (水槽容積)	45 L
Frequency (振盪頻率)	40 KHz
Tank Material (水槽材質)	SUS 304 # 1.5 mm
Overall Material (外觀材質)	SUS 304 # 0.8 mm
Cover Material (上蓋材質)	SUS 304
Output Power (洗淨出力)	600 W
Timer (定時器)	Continuous ( " 0 " ) & 99 min.
Heater (加熱器)	1000W ( DC600H only then has this equipment )
Temp.Setting (溫度設定)	Highest 80 °C ( DC600H only has this function )
Basket Size (洗籃尺寸)	435 × 270 × 135 mm ( L × W × H )
Power Supply (使用電源)	AC100 ~ 120V / 60Hz or AC220 ~ 240V / 50Hz
Net Weight (淨重)	22 Kg

## DC100H / DC150H / DC200H / DC300H / DC400H / DC600H / DC900H Instructions for use

1. First connect the power cord to the single-phase AC110V or AC220V socket. (See the sticker on the back of the machine)
2. When you want to heat, fill the water level in the water tank to 70%~80%. (When there is no heating, the water level only needs to cover the workpiece)
3. Place the workpiece into the cleaning basket and then into the tank.
4. Press the power button POWER **(ON / OFF)**, the SET TIME light turns on press the SET button SET (▲ / ▼) up and down to increase or decrease the cleaning time. The cleaning time can be adjusted from 1 to 99 minutes it has a countdown function (set " 0 " if continuous washing is required). after setting press the ultrasonic key **(START / STOP)** to start operation, to stop washing, press the ultrasonic key SONIC **(START / STOP)** is enough.
5. To use heating cleaning press the selection key MODE (●) until the SET TEMP light turns on and the screen displays "1". Press the setting key SET (▲ / ▼) to increase or decrease the required heating temperature (the maximum setting is 80°C). Dingda when the tank temperature is at the tank temperature the HEAT ON light is on, which means heating is in progress the HEAT ON light flashes, which means heating is completed and keeping warm (if you want to modify the heating set temperature, you can only modify it when the washing is stopped). if you want to query during the washing process tank temperature press the MODE (●) selection key until the TANK TEMP light turns on to display the current temperature of the tank.
6. Just turn off the POWER **(ON / OFF)** button when the machine is not in use. (the previous cleaning time will be remembered and retained, and the set heating temperature will not be retained. replying to "1" is to ensure a reminder when cleaning again. if the water level in the water tank is too low or there is no water at all, avoid directly setting the heating temperature when turning on the machine. once started the heater will burn out)
7. When there is a power outage or the power cord is unplugged, the previous cleaning time setting cannot be retained and needs to be reset.

### Specification / 規格

Model (機型)	DC150 / DC150H
Tank Size (水槽尺寸)	300 × 160 × 150 mm ( L × W × H )
Overall Size (外型尺寸)	330 × 205 × 330 mm ( L × W × H )
Tank Capacity (水槽容積)	7.2 L
Frequency (振盪頻率)	40 KHz
Tank Material (水槽材質)	SUS 304 # 1.5 mm
Overall Material (外觀材質)	SUS 304 # 0.8 mm
Cover Material (上蓋材質)	SUS 304
Output Power (洗淨出力)	150 W
Timer (定時器)	Continuous ( " 0 " ) & 99 min.
Heater (加熱器)	250 W ( DC150H only then has this equipment )
Temp.Setting (溫度設定)	Highest 80 °C ( DC150H only has this function )
Basket Size (洗籃尺寸)	280 × 130 × 100 mm ( L × W × H )
Power Supply (使用電源)	AC100 ~ 120V / 60Hz or AC220 ~ 240V / 50Hz
Net Weight (淨重)	8 Kg

### Specification / 規格

Model (機型)	DC300 / DC300H
Tank Size (水槽尺寸)	300 × 240 × 150 mm ( L × W × H )
Overall Size (外型尺寸)	330 × 285 × 330 mm ( L × W × H )
Tank Capacity (水槽容積)	10.8 L
Frequency (振盪頻率)	40 KHz
Tank Material (水槽材質)	SUS 304 # 1.5 mm
Overall Material (外觀材質)	SUS 304 # 0.8 mm
Cover Material (上蓋材質)	SUS 304
Output Power (洗淨出力)	300 W
Timer (定時器)	Continuous ( " 0 " ) & 99 min.
Heater (加熱器)	250 W (DC300H only then has this equipment )
Temp.Setting (溫度設定)	Highest 80 °C (DC300H only has this function )
Basket Size (洗籃尺寸)	260 × 220 × 100 mm ( L × W × H )
Power Supply (使用電源)	AC100 ~ 120V / 60Hz or AC220 ~ 240V / 50Hz
Net Weight (淨重)	10.5 Kg

### Specification / 規格

Model (機型)	DC600 / DC600H
Tank Size (水槽尺寸)	500 × 300 × 200 mm ( L × W × H )
Overall Size (外型尺寸)	530 × 345 × 380 mm ( L × W × H )
Tank Capacity (水槽容積)	30 L
Frequency (振盪頻率)	40 KHz
Tank Material (水槽材質)	SUS 304 # 1.5 mm
Overall Material (外觀材質)	SUS 304 # 0.8 mm
Cover Material (上蓋材質)	SUS 304
Output Power (洗淨出力)	600 W
Timer (定時器)	Continuous ( " 0 " ) & 99 min.
Heater (加熱器)	500 W (DC600H only then has this equipment )
Temp.Setting (溫度設定)	Highest 80 °C ( DC600H only has this function )
Basket Size (洗籃尺寸)	445 × 270 × 135 mm ( L × W × H )
Power Supply (使用電源)	AC100 ~ 120V / 60Hz or AC220 ~ 240V / 50Hz
Net Weight (淨重)	19.5 kg

### Specification / 規格

Model (機型)	DC900 / DC900H
Tank Size (水槽尺寸)	500 × 300 × 300 mm ( L × W × H )
Overall Size (外型尺寸)	530 × 345 × 480 mm ( L × W × H )
Tank Capacity (水槽容積)	45 L
Frequency (振盪頻率)	40 KHz
Tank Material (水槽材質)	SUS 304 # 1.5 mm
Overall Material (外觀材質)	SUS 304 # 0.8 mm
Cover Material (上蓋材質)	SUS 304
Output Power (洗淨出力)	900 W
Timer (定時器)	Continuous ( " 0 " ) & 99 min.
Heater (加熱器)	1000W ( DC900H only then has this equipment )
Temp.Setting (溫度設定)	Highest 80 °C ( DC900H only has this function )
Basket Size (洗籃尺寸)	435 × 270 × 135 mm ( L × W × H )
Power Supply (使用電源)	AC100 ~ 120V / 60Hz or AC220 ~ 240V / 50Hz
Net Weight (淨重)	24 Kg